

Kerckhoff 101 AV Instructions



1. Use Epson Remote to Power on Projector.

- User will hear a beep to indicate Projector is powering on
- If user is having difficulty, try aiming towards the projector or batteries for the remote.

2. Plug in HDMI cable from the West side of the table and to your device.

- o User may need to bring and use an adapter if device does not have a HDMI port

3. Use Epson Remote to control Volume.

- User may not be able to adjust volume from device; only from remote.

4. Use Epson Remote to Power off Projector.

- User will need to press the Power Button twice to turn off Projector
- Press once to view message on Projector and the second time to confirm shutting down.

Reminders/Troubleshooting:

- Under Display settings, make sure external display is set to Mirroring/Duplicate
- For Apple users, you may be able to change your resolution under Display → Optimize for → Either Device or Projector, whichever user prefers.
- Press the **red power button** on the top left of the Epson remote and press again to confirm shutting down.
- Projector screen should not display anything if system is shut down successfully.

AFTER USER IS FINISHED, PLEASE SHUTDOWN SYSTEM